Tools Required:

5mm hex key

Special tool (provided)

Dimensions Α. A: 10-3/8° **B**: 34-1/2" В



Protection Class: IP 65

Weight: 31.1 lbs

Notice to Installer for 99 636:

- 1. See page 3 for specific product safety warnings.
- 2. Fixture may be damaged if connected to conduit systems that contain water - Article 300-5G of the National Electric Code requires that "Conduits or raceway through which moisture may contact energized live parts shall be sealed or plugged at either or both ends."
- 3. For proper installation, an accompanying bollard head must be selected with the bollard tube.
- 4. 79 818 anchorage kit (included) must be installed in concrete pad/foundation.
- 5. It is recommended that when installing in planting areas the bollard base be slightly elevated to avoid prolonged submerging during heavy rains.
- 6. Wet location listing does not imply suitability for exposure to standing water for long periods of time.
- 7. LEDs are high-quality electronic components! Please avoid touching the light output opening of the LED directly during installation.
- 8. Emergency LED driver in bollard tube is for use with 120V OR 277V ONLY. This driver is not 120V-277V.
- 9. All BEGA System Bollard heads will be supplied with 5-pin connector which cannot be used with the integral emergency battery pack. Remove connector from bollard head before completing wiring connections.
- Leave 5-pin connectore cap engaged if pairing BEGA System Bollard tube with non-illuminated System Bollard head or if energizing System Bollard tube without head attached.

79 818 anchorage installation:

- 1. Provide means to bring supply wiring to the bollard in accordance with local code. The template has a 3" conduit hole for conduit entry.
- 2. Assemble anchorage kit. Unscrew the (3) hex bolts from the female couplers. Remove each hex bolt and washer. Align each anchor bolt with the hole in the template. Attach each anchor bolt to the template by replacing the washer and hex bolt and tightening.
- 3. Determine the finished grade for the application. Use leveling hardware to adjust template to desired finished height after pouring.
- 4. Install anchorage kit using either method:
 - A. Attach template to forming or cross bracing using the (2) nail holes provided in the template. Level template properly. Pour concrete.
 - B. Insert anchorage assembly into poured concrete. Concrete must be vibrated to ensure proper anchorage setting. Level template properly.

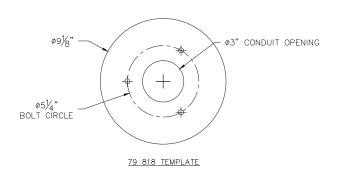


Figure 1: Anchorage Template

| Relamp | ing/Ma | aintenan | се |
|--------|--------|----------|----|

No relamping required.

Accessories

Please refer to the appropriate accessory installation sheet for further instruction when applicable.

79 818 Anchorage

Replacement Parts

Part No **Description**

Emergency LED driver

76026

In the interest of product improvement, BEGA reserves the right to make technical changes without notice.

Tools Required:

Dimensions Α. 5mm hex key A: 10-3/8" Special tool (provided) **B**: 34-1/2" В Protection Class: IP 65 Weight: 31.1 lbs

99 636 installation:

- 1. Remove (3) hex bolts and washers, once anchorage is set.
- 2. Leave template in place to provide a smooth, flat surface to mount the base.
- 3. Turn the base plate and remove from bollard, after loosening the 5mm set screw.
- 4. Align base plate holes with anchorage holes.
- 5. Bolt the base plate to the anchorage kit using the (3) hex bolts and washers.
- 6. Bring either 120V or 277V, and low voltage (if applicable), supply wiring to internal wiring box (provided) for connections to be made to the drivers. Refer to wiring diagram in Figure 2.

MAIN VOLTAGE SUPPLY WIRE TO BLACK DRIVER SUPPLY WIRES; NEUTRAL (COMMON) SUPPLY WIRE TO WHITE DRIVER SUPPLY WIRES:


GREEN GROUND WIRE TO GREEN DRIVER WIRE.

Dimming (if applicable):

DIMMING CONTROL WIRE (+) TO POSITIVE DIM CONTROL WIRE;

- DIMMING CONTROL WIRE (-) TO NEGATIVE DIM CONTROL WIRE.
- 7. Place the bollard over the base plate so that the (3) notches in the base plate align
- 8. Secure the bollard by tightening the 5mm set screw at the base.
- 9. Secure bollard head to bollard tube per bollard head installation instructions.

Figure 2: Wiring Diagram

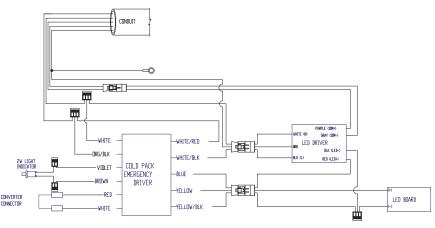

Relamping/Maintenance

No relamping required.

Accessories

Please refer to the appropriate accessory installation sheet for further instruction when applicable.

Anchorage 79 818

Replacement Parts

Part No **Description**

76026 Emergency LED driver

99 636

Product Safety Warnings:

THIS PRODUCT MUST BE INSTALLED IN ACCORDANCE WITH THE APPLICABLE INSTALLATION CODE BY A PERSON FAMILIAR WITH THE CONSTRUCTION AND OPERATION OF THE PRODUCT AND THE HAZARDS INVOLVED. SUITABLE FOR WET LOCATIONS.

MIN 90°C SUPPLY CONDUCTORS.

CE PRODUIT DOIT ÊTRE INSTALLÉ SELON LE CODE D'INSTALLATION PERTINENT, PAR UNE PERSONNE QUI CONNAÎT BIEN LE PRODUIT ET SON FONCTIONNEMENT AINSI QUE LES RISQUES INHÉRENTS. CONVIENT AUX EMPLACEMENTS MOUILLÉS.

LES FILS D'ALIMENTATION 90°C MIN.