Tools Required:

3mm hex key Phillips medium screwdriver

Weight: 8.2 lbs.

Dimensions A: 13-3/4"

Notice: Instructions for standard installation. For low profile canopy, see pages 2-3.

Notice to Installer for 56 590:

- 1. Luminaire mounting canopy mounts directly to 4" standard octagonal wiring box.
- 2. For interior locations only.

56 590 - installation:

- 1. Loosen canopy set screw and slide down canopy on cable.
- 2. Feed driver wires through canopy baseplate.
- 3. Make luminaire and supply wiring connections inside in the wiring box: MAIN VOLTAGE SUPPLY WIRE TO BLACK LUMINAIRE WIRE NEUTRAL (COMMON) SUPPLY WIRE TO WHITE LUMINAIRE WIRE GROUND SUPPLY WIRE TO GREEN LUMINAIRE WIRE

If applicable:

DIMMING CONTROL WIRE (+) TO PURPLE DRIVER WIRE DIMMING CONTROL WIRE (-) TO GREY DRIVER WIRE

- 4. Mount canopy baseplate directly to standard recessed 4" octagonal wiring box (by others).
- 5. Move canopy cover up to the ceiling/canopy baseplate and tighten set screw on canopy cover to secure.
- 6. Attach glass globe onto housing by screwing the metal housing.


56 590 Cable shortening (if necessary):

Note: Cable can be shortened on canopy side ONLY.

- 1. Loosen the canopy set screw. Slide canopy down the cable.
- 2. Undo wiring splices, loosen ground screw, and remove the ground wire.
- 3. Remove luminaire from octagonal wiring box.
- 4. Loosen plastic cord grip by loosening (x2) lock nuts and torx screws
- 5. There is a secondary locking collar in the canopy, loosen collar and pull wire through to desired length.
- 6. Cut away excess cable to using proper cutting tools.
- 7. Re-tighten collar to secure cord. Tighten plastic cord grip by tightening (x2) torx screws and replacing lock nuts.
- 8. See "56 590 installation" section above for completing re-installation.

WARNING: FAILURE TO FOLLOW THESE INSTALLATION INSTRUCTIONS CAN CAUSE FIXTURE TO FAIL. DO NOT SHORTEN THE CABLE ON THE FIXTURE SIDE. DO NOT REMOVE OR TAMPER WITH SAFETY HARDWARE ON FIXTURE SIDE.

Figure 1

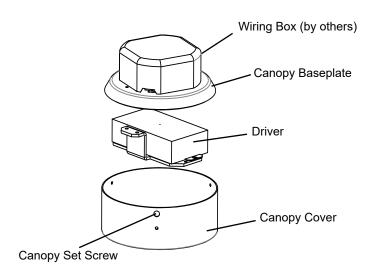

Relamping/Maintenance

No relamping necessary.

Accessories

Please refer to the appropriate accessory installation sheet for further instruction when applicable. **Replacement Parts**

Diffuser

Description Part No

Driver (120-277V) 76125-05 LED Module (3000K) LED-0523/930 LED Module (4000K) LED-0523/940

112273.0

Lamp: 28.2W LED

Tools Required:

3mm hex key Phillips medium screwdriver

Weight: 8.2 lbs.



Dimensions A: 13-3/4"



Low Profile Canopy Installation Methods

79005 - wiring box installation:

Hollow (stud) ceiling construction - Secure wiring box to wood or metal blocking. Connect conduit to wiring box (if needed) and pull wires for electrical connections to be

Poured concrete construction - Attach wiring box to concrete form. Connect conduit to wiring box and pull wires for electrical connections to be made later. Pour concrete and remove form.

IMPORTANT: Do not pour concrete directly on to box!


56 590 w/Low Profile Canopy - installation:

- 1. Undo set screw on canopy cover and lower from canopy baseplate.
- 2. Undo two set screws on canopy strain relief, adjust luminaire cable to desired length, and re-tighten two set screws.
- 3. Make supply wiring and driver wiring connections inside the wiring box: MAIN VOLTAGE SUPPLY WIRE TO BLACK LUMINAIRE WIRE NEUTRAL (COMMON) SUPPLY WIRE TO WHITE LUMINAIRE WIRE GREEN GROUND WIRE TO GREEN LUMINAIRE WIRE

Dimming (if applicable):

DIMMING CONTROL WIRE (+) TO POSITIVE DRIVER DIM CONTROL WIRE DIMMING CONTROL WIRE (-) TO NEGATIVE DRIVER DIM CONTROL WIRE

- 4. Mount canopy baseplate directly to wiring box 79005 using hardware (provided).
- 5. Move canopy cover up to the canopy baseplate and tighten set screw to secure.

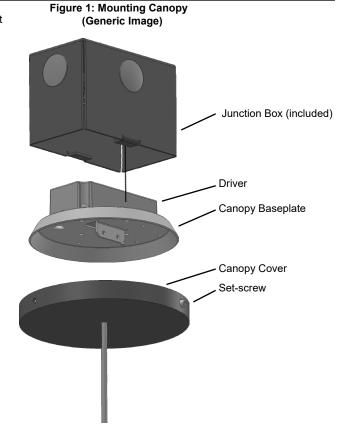

Relamping/Maintenance

No relamping necessary.

Accessories

Please refer to the appropriate accessory installation sheet for further instruction when applicable. **Replacement Parts**

Description

Part No

Diffuser

112273.0

Driver (120-277V) LED Module (3000K) 76032

LED Module (4000K)

LED-0523/930

LED-0523/940

Lamp: 28.2W LED

Product Safety Warnings:
THIS PRODUCT MUST BE INSTALLED IN ACCORDANCE WITH THE APPLICABLE INSTALLATION CODE BY A PERSON FAMILIAR WITH THE CONSTRUCTION AND OPERATION OF THE PRODUCT AND THE HAZARDS INVOLVED. SUITABLE FOR DAMP LOCATIONS.

MIN 90°C SUPPLY CONDUCTORS.

CE PRODUIT DOIT ÊTRE INSTALLÉ SELON LE CODE D'INSTALLATION PERTINENT, PAR UNE PERSONNE QUI CONNAÎT BIEN LE PRODUIT ET SON FONCTIONNEMENT AINSI QUE LES RISQUES INHÉRENTS. CONVIENT AUX EMPLACEMENTS HUMIDES.

LES FILS D'ALIMENTATION 90°C MIN.