Tools Required:

- 3mm hex head screwdriver
- Phillips head screwdriver
- Adjustable wrench
- · 6mm hex head screwdriver

c·

Dimensions

A: 8-1/4

12-3/8

5-1/4

D: 5-1/8



Overview:

LED Watts: 60.3W System Watts: 69.0W

Controllability: 0-10V dimmable

Weight: 10.1 lbs. Protection Class: IP65

Notice to Installer:

- 1. See page 2 for specific product safety warnings.
- 2. In conformance with UL Standard 1598, a silicone based sealant must be used between luminaire and supporting surface.
- 3. Luminaire mounts directly to standard recessed 4" octagonal wiring (by others), using mounting plate provided.

Installation: Luminaire


- 1. Loosen the (1) 3mm hex head set screw on the fixture canopy to remove luminaire
- 2. Feed luminaire wiring through the luminaire base and mounting plate into wiring box
- 3. Make supply wiring and luminaire wiring connections inside the wiring box: MAIN VOLTAGE SUPPLY WIRE TO BLACK LUMINAIRE WIRE NEUTRAL (COMMON) SUPPLY WIRE TO WHITE LUMINAIRE WIRE GREEN GROUND WIRE TO GREEN LUMINAIRE WIRE

Dimming (if applicable):

DIMMING CONTROL WIRE (+) TO POSITIVE DIM LUMINAIRE WIRE DIMMING CONTROL WIRE (-) TO NEGATIVE DIM LUMINAIRE WIRE

- 4. Attach provided mounting plate directly to a 4" standard octagonal wiring box using the (2) phillips head screws (provided).
- 5. **Important!** Place a small bead of silicone around the back side of the mounting plate that will come in contact with the finished surface (exterior applications only). Failure to do so can cause water entry and will void warranty.
- 6. Place luminaire base over the mounting plate. Tighten nuts (provided) on the studs to secure. (Figure 1)
- 7. Ensure stainless steel safety cable is connected between luminaire canopy and luminaire base.
- 8. Replace luminaire canopy (with luminaire attached) and align to desired orientation. Tighten (1) 3mm hex head set screw to secure into place.
- 9. To adjust head angle, use 6mm hex head screwdriver to loosen screw at aiming joint. Aim luminaire head as needed and tighten screw to secure into place.

Figure 1:

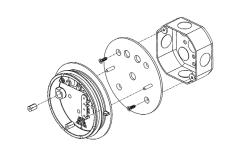

Accessories

Please refer to the appropriate accessory installation sheet for further instruction when applicable.

180° Glare shield 71 121 360° Glare shield 79 831 71 123 Elliptical spread lens Concentric ring louver 71 122

Maintenance:

Clean regularly with solvent-free cleaner removing dirt and debris. Do not use high pressure cleaners.

Replacement Parts

See label inside of fixture for LED replacement part number.

Consult factory for all other replacement components.

Product Safety Warnings:

THIS PRODUCT MUST BE INSTALLED IN ACCORDANCE WITH THE APPLICABLE INSTALLATION CODE BY A PERSON FAMILIAR WITH THE CONSTRUCTION AND OPERATION OF THE PRODUCT AND THE HAZARDS INVOLVED. SUITABLE FOR MOUNTING WITHIN 1.2 m (4 ft) OF THE GROUND. SUITABLE FOR WET LOCATIONS.

MIN 60°C SUPPLY CONDUCTORS.

LES FILS D'ALIMENTATION 60°C MIN.

CE PRODUIT DOIT ÊTRE INSTALLÉ SELON LE CODE D'INSTALLATION PERTINENT, PAR UNE PERSONNE QUI CONNAÎT BIEN LE PRODUIT ET SON FONCTIONNEMENT AINSI QUE LES RISQUES INHÉRENTS. PEUT ÊTRE INSTALLÉ À MOINS DE 1,2 m (4 pi) DU SOL. CONVIENT AUX EMPLACEMENTS MOUILLÉS.